

# Contents

## Chapter 1 – Introduction to the Lancair ES FastBuild Kit

- 1.1 Introduction . . . . . 1.1
- 1.2 Recommended Reading and Background Information . . . . . 1.2
- 1.3 The Manuals, Blueprints and the ES CD . . . . . 1.3
  - 1.3.A Manual Layout . . . . . 1.3
  - 1.3.B Blueprints . . . . . 1.4
  - 1.3.C The ES CD . . . . . 1.4
    - CD Tips . . . . . 1.4
- 1.4 Setting up your Shop . . . . . 1.5
  - 1.4.A Shop Size . . . . . 1.5
  - 1.4.B Temperature Control . . . . . 1.5
  - 1.4.C Cutting and Layup Tables . . . . . 1.6
  - 1.4.D Making a Useful Jack Stand . . . . . 1.7
- 1.5 Shop Tools and Supplies . . . . . 1.8
  - 1.5.A Basic Tools . . . . . 1.8
  - 1.5.B Specialized Tools . . . . . 1.10
  - 1.5.C Supplies . . . . . 1.14

## Chapter 2 – Construction Materials and Processes

- 2.1 Introduction . . . . . 2.1
  - 2.1.A Building Safely . . . . . 2.1
    - Safety During Construction . . . . . 2.2
    - Removing the Peelply Protective Coating . . . . . 2.2
    - Adhesives and Epoxies . . . . . 2.2
    - Solvents and Cleaning Parts . . . . . 2.3

- 2.2 Construction Materials . . . . . 2.4
  - 2.2.A Prepreg and Fiberglass . . . . . 2.4
    - Honeycomb Prepreg Panels . . . . . 2.4
    - Cardboard Templates . . . . . 2.4
    - BID Schedules . . . . . 2.4
    - Cutting Fiberglass Cloth on the Bias . . . . . 2.4
    - BID Tape Weave . . . . . 2.5
  - 2.2.B Epoxy/Adhesive used in Aircraft Assembly . . . . . 2.6
    - Structural Adhesive . . . . . 2.6
    - Mixing ~~Hysol 9360~~ Hysol 9360 Structural Adhesive . . . . . 2.6
    - Epoxy Resin . . . . . 2.7
- 2.3 Construction Processes . . . . . 2.8
  - 2.3.A Preparing Joints and Joggles . . . . . 2.8
    - Trimming Joggles . . . . . 2.8
  - 2.3.B Drilling, Bolt-hole Tolerances and Hardpoints . . . . . 2.10
    - Drilling Technique . . . . . 2.10
    - Tolerances and Bolt Holes . . . . . 2.10
    - Drilling Alignment Holes . . . . . 2.11
    - Hardpoints . . . . . 2.11
  - 2.3.C Fastening Parts Together and the Double-bond Seam . . . . . 2.12
    - Finishing the Double-bond Seam . . . . . 2.12
  - 2.3.D The Plastic Layup . . . . . 2.15
    - Creating the Plastic Layup . . . . . 2.15
    - Stippling and Applying the Plastic Laminate . . . . . 2.15
  - 2.3.E Micro Radii and Fiberglass Bridging . . . . . 2.17
    - Micro Radii Methods . . . . . 2.17
    - Avoiding Fiberglass Bridging . . . . . 2.17
  - 2.3.F Building Light and Building Straight . . . . . 2.18
    - Building Light . . . . . 2.18
    - Building Straight . . . . . 2.20



2.3.G	Control Systems . . . . .	2.21
	Working with Pushrod Ends . . . . .	2.21
	Installing Castle Nuts and Cotter Pins . . . . .	2.23
	Creating Consistent Control Surface Gaps . . . . .	2.23
2.3.H	Working with Aluminum Tubing . . . . .	2.25
	Cutting Aluminum Tubing . . . . .	2.25
	Tube Flaring . . . . .	2.25
2.3.I	Working with Braided Hose . . . . .	2.25
2.3.J	Painting . . . . .	2.27

### Chapter 3 – Completing the Elevators

3.1	Introduction . . . . .	3.1
3.2	Parts List . . . . .	3.2
3.3	Construction Procedures . . . . .	3.3
	3.3.A Counterbalancing the Elevators . . . . .	3.3
	3.3.B Setting the Elevator Travel . . . . .	3.6
	Setting the Travel . . . . .	3.6
	Installing the Travel Stops . . . . .	3.6
	Trimming the Travel Stops . . . . .	3.7
	3.3.C Trimming the Elevator to Rudder/Vertical Stabilizer Surface . . . . .	3.8

### Chapter 4 – Completing the Ailerons

4.1	Introduction . . . . .	4.1
4.2	Parts List . . . . .	4.2
4.3	Construction Procedures . . . . .	4.4
	4.3.A Installing the Aileron Trim Servo . . . . .	4.4
	Making the Trim Tab . . . . .	4.5
	4.3.B Completing the Wing’s Aileron Control . . . . .	4.8
	Aileron Pushrods . . . . .	4.16
	Aileron Travel and Pushrod Clearance . . . . .	4.19
	4.3.C Balancing the Ailerons . . . . .	4.20

### Chapter 5 – Installing the Windows and Windshield

5.1	Introduction . . . . .	5.1
	Before You Start . . . . .	5.1
5.2	Parts List . . . . .	5.2
	Supplies . . . . .	5.2
5.3	Construction Procedures . . . . .	5.3
	Handling Plexiglas . . . . .	5.3
	5.3.A Preparing the Top Fuselage Shell . . . . .	5.4
	5.3.B Preparing the Windows . . . . .	5.5
	5.3.C Installing the Windows . . . . .	5.7
	Reinforcing the Window-to-Fuselage Bond . . . . .	5.9
	5.3.D Installing the Windshield . . . . .	5.10

### Chapter 6 – Closing out the Fuselage and Installing the Door

6.1	Introduction . . . . .	6.1
	Before You Start . . . . .	6.1
6.2	Parts List . . . . .	6.2
	Supplies . . . . .	6.2
6.3	Construction Procedures . . . . .	6.3
	6.3.A Building the Fuselage Cradles . . . . .	6.3
	Positioning the Cradles . . . . .	6.3
	6.3.B Aligning the Bottom Fuselage to a Center Line . . . . .	6.4
	6.3.C Setting the Bottom Fuselage to Level . . . . .	6.6
	6.3.D Pre-fitting the Top and Bottom Fuselage Shells . . . . .	6.7
	Trimming the Joggle . . . . .	6.7
	6.3.E Fitting the Doorframe . . . . .	6.9
	6.3.F Fitting the Door . . . . .	6.13
	6.3.G Bonding the Doorframe to the Fuselage . . . . .	6.15
	6.3.H Installing the Optional Door Lock . . . . .	6.16
	6.3.I Installing the Door Hinges . . . . .	6.17
	6.3.J Installing the Door Seal . . . . .	6.19



6.3.K	Installing the Overhead Console and Air Ducts . . . . .	6.21
6.3.L	Closing Out the Fuselage . . . . .	6.24
6.3.M	Installing the Aft Seat Back Flanges. . . . .	6.26

## Chapter 7 – Aileron Controls

---

7.1	Introduction . . . . .	7.1
7.2	Parts List. . . . .	7.2
7.3	Construction Procedures. . . . .	7.3
7.3.A	Installing the Inboard Bellcrank. . . . .	7.4
7.3.B	Installing the Aileron Torque Tubes . . . . .	7.8
7.3.C	Completing the Aileron Pushrods . . . . .	7.12
	Connecting the Two Inboard Bellcranks to the Wing Pushrods .	7.12
	Connecting the Aileron Crossover Tube to the Inboard Bellcranks	7.15
	Connecting the Torque Tube to Bellcrank Pushrods . . . . .	7.16
7.3.D	Installing the Control Sticks . . . . .	7.18
7.3.E	Aileron Control Stops . . . . .	7.19
7.3.F	<u>Rigging the Ailerons . . . . .</u>	<u>7.21</u>

## Chapter 8 – Elevator Controls

---

8.1	Introduction . . . . .	8.1
	Construction Prep. . . . .	8.1
8.2	Parts List . . . . .	8.2
8.3	Construction Procedures. . . . .	8.3
8.3.A	Assembling the Elevator Idler Arm . . . . .	8.4
8.3.B	Installing the Idler Arm . . . . .	8.5
8.3.C	Mounting the Elevator Torque Tube. . . . .	8.6
8.3.D	Making the Elevator Pushrod Enclosure . . . . .	8.8

8.3.E	Installing the Elevator Pushrods . . . . .	8.10
	Making the Forward Pushrod. . . . .	8.10
	Installing the Forward Pushrod . . . . .	8.12
	Making the Torque Tube/Idler Arm Pushrod . . . . .	8.13
	Installing the Torque Tube/Idler Arm Pushrod. . . . .	8.14
	Making the Idler Arm/Elevator Weldment Pushrod. . . . .	8.15
	Installing the Idler Arm/Elevator Weldment Pushrod . . . . .	8.16
8.3.F	Adjusting the Elevator Controls . . . . .	8.17
	Checking the Elevator Controls to Aileron Travel . . . . .	8.17

## Chapter 9 – Wing Fairings

---

9.1	Introduction . . . . .	9.1
9.2	Parts List. . . . .	9.2
9.3	Construction Procedures. . . . .	9.3
9.3.A	Mating the Wings to the Fuselage . . . . .	9.3
9.3.B	Preparing for the Wing Fairing Pre-Fit. . . . .	9.4
	Checking the Inboard Edge of the Wing . . . . .	9.4
	Turning the Fuselage Upside Down and Installing the Wings . . .	9.4
9.3.C	Pre-fitting the Top and Bottom Wing Fairings . . . . .	9.5
	Cutting and Fitting the Parallel Support Ribs. . . . .	9.7
	Cutting and Fitting the Right-angle Support Webs. . . . .	9.8
	Assembling the Support Ribs and Webs . . . . .	9.9
	Bonding the Top Fairings . . . . .	9.10
	Bonding the Bottom Fairings . . . . .	9.11
	Installing the Phenolic Hardpoint . . . . .	9.12
	Reinforcing the Support Ribs . . . . .	9.12
9.3.D	Creating Access Openings . . . . .	9.13
9.3.E	Wing Incidence Templates . . . . .	9.15
	Checking the Wing Incidence . . . . .	9.15

## Chapter 10 – Wing Tips

---

10.1 Introduction	10.1
10.2 Parts List	10.2
10.3 Construction Procedures	10.3
10.3.A Mounting the Wing Tip	10.4
10.3.B Adding the Wing Tip Lighting	10.9
10.3.C Completing the Fuel Vents	10.13

## Chapter 11 – Main Gear and Fairings

---

11.1 Introduction	11.1
11.2 Parts List	11.2
11.3 Construction Procedures	11.4
11.3.A Assembling the Wheels and Tires	11.4
11.3.B Installing the Axle	11.6
11.3.C Installing the Cleveland Brake Assemblies	11.10
Preparing for the Brake Installation	11.12
11.3.D Installing the Main-gear Fairings	11.13
Gear-leg Fairings	11.13
Wheel Pants	11.14
Fuselage-gear Fairings	11.19
11.3.E <u>Installing the Nose Gear Wheel Pants</u>	<u>11.20</u>

## Chapter 12 – Brake System and Rudder Controls

---

12.1 Introduction	12.1
12.2 Parts List*	12.2
12.3 Construction Procedures	12.4
12.3.A Overview of the ES Brake System	12.4
12.3.B Positioning and Installing the Brake Reservoir	12.5
12.3.C Installing the Rudder Pedals	12.6

12.3.D Installing the Brake Master Cylinders	12.7
12.3.E Installing the Crossover Mounting Tubes	12.8
12.3.F Installing the Brake Fittings	12.11
12.3.G Installing the Brake Lines	12.12
12.3.H Filling the Brake System with Brake Fluid	12.17
12.3.I Overview of the External Rudder Cable Installation	12.18
External Rudder Cable	12.18
Internal Rudder Cable	12.24
12.3.J <u>Installing the Rudder to the Vertical Stabilizer</u>	<u>12.25</u>

## Chapter 13 – Flap Controls

---

13.1 Introduction	13.1
13.2 Parts List	13.2
13.3 Construction Procedures	13.3
13.3.A Installing the Flaps' Torque Tube	13.4
Creating the Torque Tube Alignment Holes	13.5
Installing the Bearing Blocks	13.6
Inserting the Torque Tube	13.7
Installing the Delrin Guides	13.8
13.3.B Installing the Flap Motor	13.9
Bonding in the Attach Bolts	13.9
Reinforcing the Seat Belt Supports	13.10
Installing the Flap Motor	13.11
13.3.C Flap Pushrod Installation	13.12
13.3.D Adjusting the Flaps	13.15

## Chapter 14 – Fuel System

---

14.1	Introduction	14.1
14.2	Parts List	14.2
14.3	Construction Procedures	14.3
14.3.A	Making and Installing the Wing to Fuselage Lines	14.3
	Drilling the Fuselage Openings for the Fuel Lines	14.4
	Installing the Fuel Lines through the Drilled Holes	14.4
14.3.B	Installing the Fuel Selector	14.5
	Finishing the Fuselage to Wing Fuel Lines	14.6
	Routing the Fuel Lines in the Fuselage	14.7
14.3.C	Installing the Electric Fuel Pump	14.8
	The Fuel Pump Mount	14.8
	Locating and Securing the Fuel Pump	14.9
	Venting the Fuel Pump	14.9
	Connecting the Fuel Selector to the Fuel Pump	14.10
14.3.D	Installing the Fuel Return Line to Firewall	14.11

## Chapter 15 – Assembling and Installing the Seats

---

15.1	Introduction	15.1
15.2	Parts List	15.2
15.3	Construction Procedures	15.3
15.3.A	Making the Hardpoints for the Aft Seat Belts	15.3
15.3.B	Seat Pan Installation for the Front Seats	15.4
15.3.C	Assembling the Front Seats	15.5
15.3.D	Making the Shear Box Cover	15.7
15.3.E	Creating the Center Seat Belt Attach Reinforcement	15.9
15.3.F	Closing Off the Forward Seat Mount	15.11
15.3.G	Mounting the Seats	15.12

15.3.H	Making and Installing the Aft Seats	15.14
	Making the Aft Flange Supports	15.16
	Cutting the Aft Seat Belt Openings	15.16
	Finishing and Securing the Seat Bottom	15.17
15.3.I	Making the Torque Tube Cover	15.19
15.3.J	Finishing the Seat Bottom	15.21
	Finishing the Aft Flange	15.22
15.3.K	Finishing the Seat Back	15.23
	Installing the Latches	15.24
15.3.L	Installing the Seat Belts	15.25
	Installing the Front Seat Belts	15.25
	Installing the Aft Seat Belts	15.27

## Chapter 16 – Installing a Step

---

16.1	Introduction	16.1
16.2	Parts List	16.2
16.3	Construction Procedures	16.3
16.3.A	Locating and Cutting a Hole in the Fuselage	16.3
16.3.B	Installing the Step	16.5

## Chapter 17 – Pre-fitting and Mounting the Horizontal Stabilizer

---

17.1	Introduction	17.1
	Construction Prep	17.1
17.2	Parts Lists	17.1
17.3	Construction Procedures	17.2
17.3.A	Pre-fitting the Horizontal Stabilizer	17.2
	Aligning to the Wings	17.4
	Aligning to the Fuselage	17.5
17.3.B	Marking the Horizontal Stabilizer Placement	17.6

17.3.C Bonding the Horizontal Stabilizer . . . . .	17.7
Preparing the Mounting Cradle . . . . .	17.7
Final Mounting of the Horizontal Stabilizer . . . . .	17.8

## Chapter 18 – Mounting the Vertical Stabilizer and Rudder

---

18.1 Introduction . . . . .	18.1
18.2 Parts List . . . . .	18.2
18.3 Construction Procedures . . . . .	18.3
18.3.A Cutting the Horizontal Stabilizer Opening in the Vertical Stabilizer	18.3
18.3.B Fitting the Vertical Stabilizer/Rudder Assembly . . . . .	18.4
18.3.C Installing the Cabin Air Scoop . . . . .	18.9
Locating the Scoop . . . . .	18.9
Installing the Drain Tubes. . . . .	18.11
18.3.D Elevator Weldment Inspection Panels . . . . .	18.13
18.3.E Installing the Optional Rudder Trim Tab. . . . .	18.16
Creating the Trim Tab Access Opening and Mounting the Servo	18.16
Preparing the Trim Tab's Location . . . . .	18.19
Installing the Trim Tab . . . . .	18.20
Finishing the Trim Tab . . . . .	18.22
18.3.F Installing the Rudder Taillight . . . . .	18.23
18.3.G Venting and Electrical Tubing. . . . .	18.25
18.3.H Balancing the Rudder . . . . .	18.27
18.3.I Closing the Vertical Stabilizer/Rudder Assembly . . . . .	18.29
18.3.J Closing the Rudder L.E. . . . .	18.34
Pre-fitting the Rudder Spar Closeout . . . . .	18.36
Bonding the Rudder Spar Closeout . . . . .	18.36
18.3.K Creating the Rudder Stops. . . . .	18.37
Measuring Rudder Travel. . . . .	18.39

## Chapter 19 – Baggage Door

---

19.1 Introduction . . . . .	19.1
Before You Start. . . . .	19.1
19.2 Parts List. . . . .	19.2
19.3 Construction Procedures. . . . .	19.3
19.3.A Fitting and Hinging the Baggage Door . . . . .	19.3
Installing the Hinges . . . . .	19.4
19.3.B Installing the Baggage Door Locks . . . . .	19.5
19.3.C Installing the Weather Seal . . . . .	19.8

## Chapter 20 – Interior Panels

---

20.1 Introduction . . . . .	20.1
20.2 Parts List. . . . .	20.2
20.3 Construction Procedures. . . . .	20.3
20.3.A Creating the Hat Rack. . . . .	20.4
20.3.B Making and Installing the Arm Rests . . . . .	20.7
20.3.C Making and Installing the Side Panels. . . . .	20.9
20.3.D Forward Floorboards . . . . .	20.12
Adding Vertical Supports . . . . .	20.13
20.3.E Installing the Fuel Line Cover . . . . .	20.15

## Chapter 21 – Firewall Forward – Continental IO-550N

---

21.1 Introduction . . . . .	21.1
21.2 Parts List. . . . .	21.2
21.3 Construction Procedures. . . . .	21.8
21.3.A Mounting the Engine . . . . .	21.8
21.3.B Installing the Engine Exhaust . . . . .	21.10



21.3.C	Installing the Baffling . . . . .	21.12
	Fitting the baffling . . . . .	21.13
	Installing the Oil Cooler Box . . . . .	21.14
	Installing the Oil Cooler Door . . . . .	21.15
	Completing the Oil Cooler Box Installation . . . . .	21.16
	Finishing the Rear Vertical Baffling . . . . .	21.20
	Installing the Right Deck Baffling . . . . .	21.23
	Installing the Left Deck Baffling . . . . .	21.24
	Installing the Front Shroud Baffling . . . . .	21.25
	Installing the Baffling Seal . . . . .	21.28
	Installing Flanges and Grommets on the Right Rear Panel . . . . .	21.29
	Installing the Fuel Pump Shroud . . . . .	21.30
21.3.D	Completing the Engine's Primary Control Systems . . . . .	21.31
	View of the Engine Control Systems . . . . .	21.31
	Installing the Throttle Cable and Bracket . . . . .	21.32
	Installing the Mixture Control Cable and Bracket . . . . .	21.33
	Installing the Prop Governor Cable . . . . .	21.34
21.3.E	Connecting the Manifold Pressure . . . . .	21.35
21.3.F	Completing the Fuel System . . . . .	21.36
	Using Fireshield . . . . .	21.36
	Installing the Gascolator . . . . .	21.36
	Connecting the Gascolator . . . . .	21.37
	Installing the Fuel Lines . . . . .	21.38
	Assembling the Cylinder Drain Lines . . . . .	21.40
	Assembling the Distributor Drain Lines . . . . .	21.41
21.3.G	Engine Oil Systems . . . . .	21.43
	Installing the Oil Pressure Transducer . . . . .	21.43
	Oil Temperature Sensor . . . . .	21.43
	Oil Breather Line . . . . .	21.44
21.3.H	Installing the Propeller/Spinner . . . . .	21.45
21.3.I	Installing the Cowling . . . . .	21.46
	Bodyworking and Seam Finishing the Cowling . . . . .	21.49

21.3.J	Installing the Induction Air Filter . . . . .	21.50
21.3.K	Optional Vacuum System . . . . .	21.51
	Installing the Vacuum System Pump . . . . .	21.51
21.3.L	Factory Installed Baffling . . . . .	21.52

## Chapter 22 – Instrument Panel

22.1	Introduction . . . . .	22.1
	Supplies . . . . .	22.1
22.2	Parts List . . . . .	22.2
22.3	Construction Procedures . . . . .	22.3
	22.3.A Pre-fitting the Instrument Panel . . . . .	22.3
	22.3.B Positioning the Instrument Panel in the Fuselage . . . . .	22.4
	22.3.C Installing the Instrument Panel . . . . .	22.5
	Installing the Support Braces . . . . .	22.6
	22.3.D Installing the Instrument Panel Dust Cover . . . . .	22.8
	Cutting the Defroster Air Exit Openings . . . . .	22.8
	Installing the Defroster Duct Flange . . . . .	22.9

## Chapter 23 – General Wiring

23.1	Introduction . . . . .	23.1
	Determining the Wire Size . . . . .	23.1
23.2	Parts List . . . . .	23.2
23.3	Construction Procedures . . . . .	23.3
	23.3.A Using the Wire Sizes Diagram . . . . .	23.3
	23.3.B Battery Box Options . . . . .	23.4
	23.3.C Basic Wiring Techniques . . . . .	23.6
	Grounding . . . . .	23.6
	Circuit Breakers . . . . .	23.6



23.3.D	Wiring the Flaps . . . . .	23.9
	Testing the Flap Wiring System . . . . .	23.11
	Setting the Flap Limit Stops . . . . .	23.12
23.3.E	Wiring the Lights . . . . .	23.13
	Position/Strobe Lights . . . . .	23.13
	Landing Lights . . . . .	23.14
	Instrument Lighting . . . . .	23.15
23.3.F	Fuel Pump/Primer Wiring . . . . .	23.16
23.3.G	Trim System Wiring . . . . .	23.17
23.3.H	<del>Wiring the Automatic Door Seal Pump . . . . .</del>	<del>23.19</del>

## Chapter 24 – Odds and Ends

24.1	Introduction . . . . .	24.1
24.2	Parts List . . . . .	24.2
24.3	Construction Procedures . . . . .	24.3
	24.3.A Completing the Fresh Air Vent . . . . .	24.3
	24.3.B Completing the Pitot/Static Installation . . . . .	24.6
	24.3.C Installing the Door Seal Pump . . . . .	24.11
	24.3.D <u>Setting the Flap Micro Switches . . . . .</u>	<u>24.13</u>
	<u>Establishing Polarity . . . . .</u>	<u>24.13</u>

## Chapter 25 – Weight and Balance

25.1	Introduction . . . . .	25.1
25.2	Airplane Weighing Procedure . . . . .	25.2
	25.2.A Moment Weights . . . . .	25.2
	25.2.B Weighing Example . . . . .	25.3
25.3	Balancing the Ailerons . . . . .	25.3

<b>After Leaving the Lancair Build Shop . . . . .</b>	<b>A.1</b>
Post Build Shop Flow Chart . . . . .	A.1

<b>ES Annual Inspection Worksheet . . . . .</b>	<b>B.1</b>
B.1 Inspection Worksheet . . . . .	B.1
Power plant inspection – Engine . . . . .	B.1
Propeller Group . . . . .	B.2
Cabin and Cockpit Group . . . . .	B.2
Wing Group . . . . .	B.3
Empennage Group . . . . .	B.3
Electrical System . . . . .	B.3
Landing Gear Group . . . . .	B.4
Fuel System . . . . .	B.4
Fuselage and Hull Group . . . . .	B.4
Radio Group (Installation) . . . . .	B.5
Emergency Locator Transmitter . . . . .	B.5
Miscellaneous Group . . . . .	B.5
B.2 Items Required for Flight . . . . .	B.6
B.3 Work Performed . . . . .	B.6
B.4 Power Plant Operational Preflight Check . . . . .	B.7
. . . . .	B.7

<b>Before Your First Flight . . . . .</b>	<b>D.1</b>
---	------------

<b>Tools . . . . .</b>	<b>E.1</b>
------------------------	------------

<b>Glossary . . . . .</b>	<b>G.1</b>
---------------------------	------------

<b>Index . . . . .</b>	<b>I.1</b>
------------------------	------------





